

FIG. 1
PRIOR ART

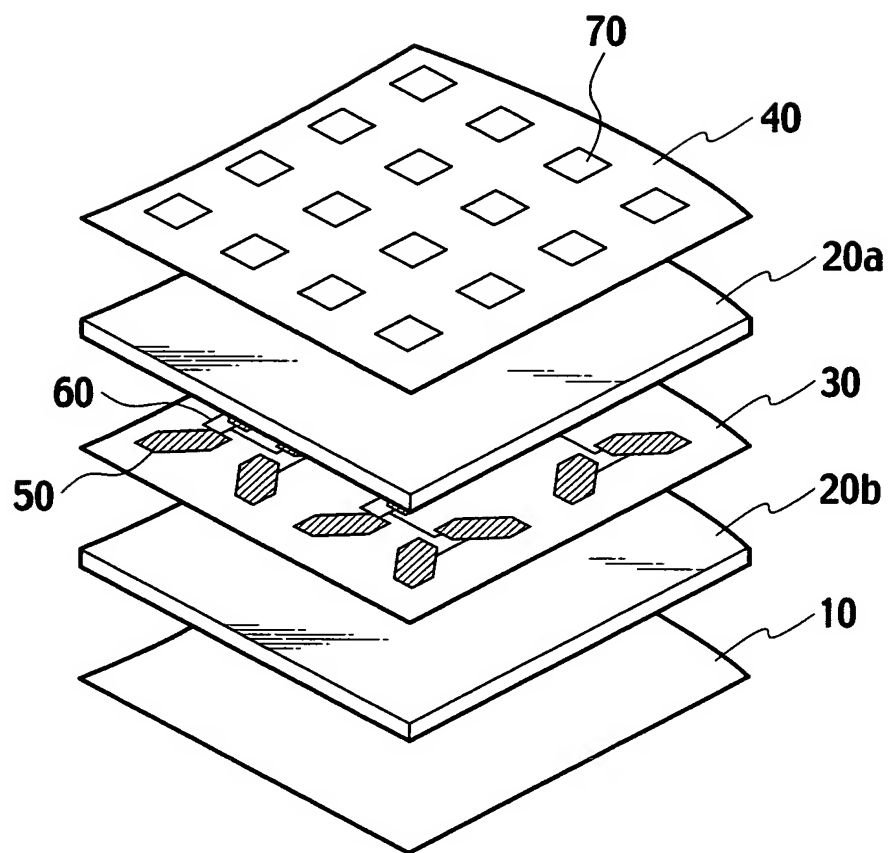
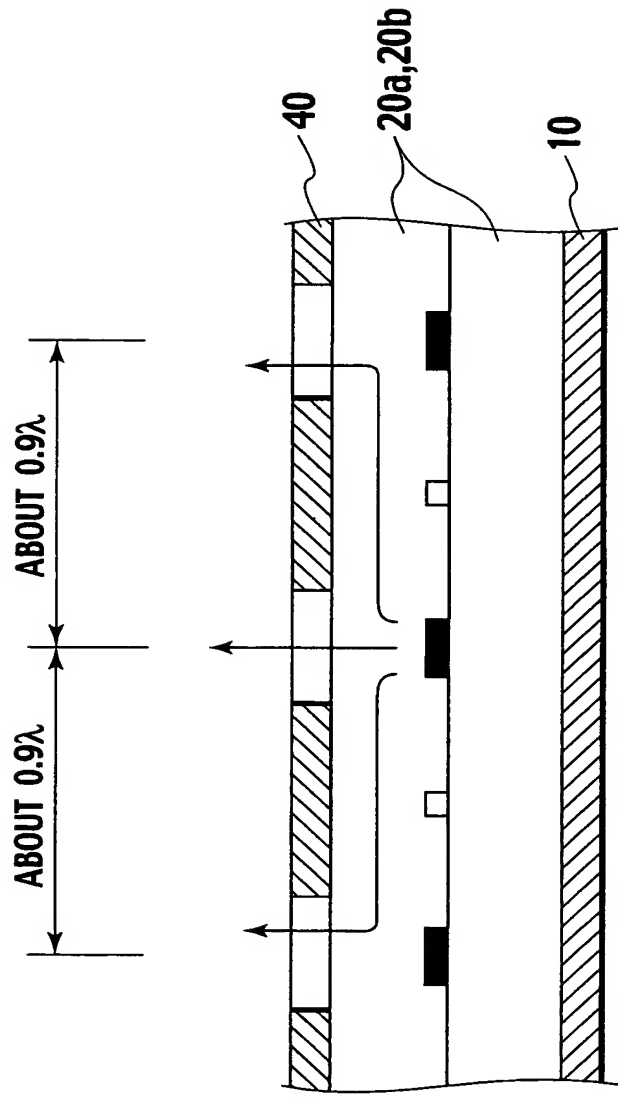


FIG.2
PRIOR ART



**EFFECTIVE USE OF TRANSVERSE PROPAGATION MODE
(PARALLEL PLATE MODE)**

FIG.3
PRIOR ART

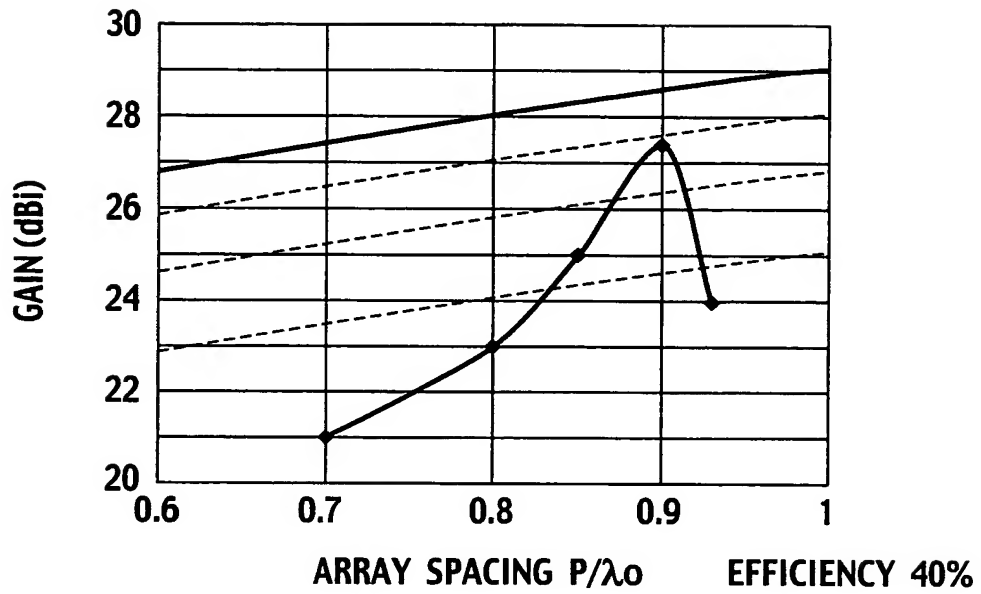


FIG.4
PRIOR ART

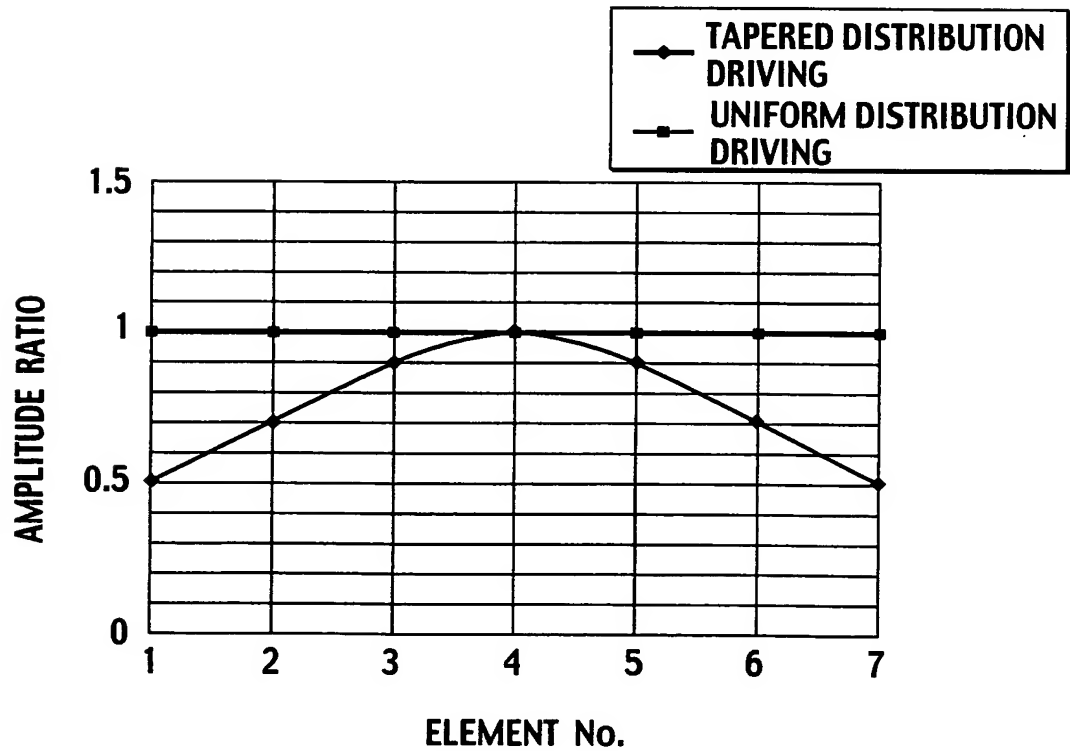


FIG.5
PRIOR ART

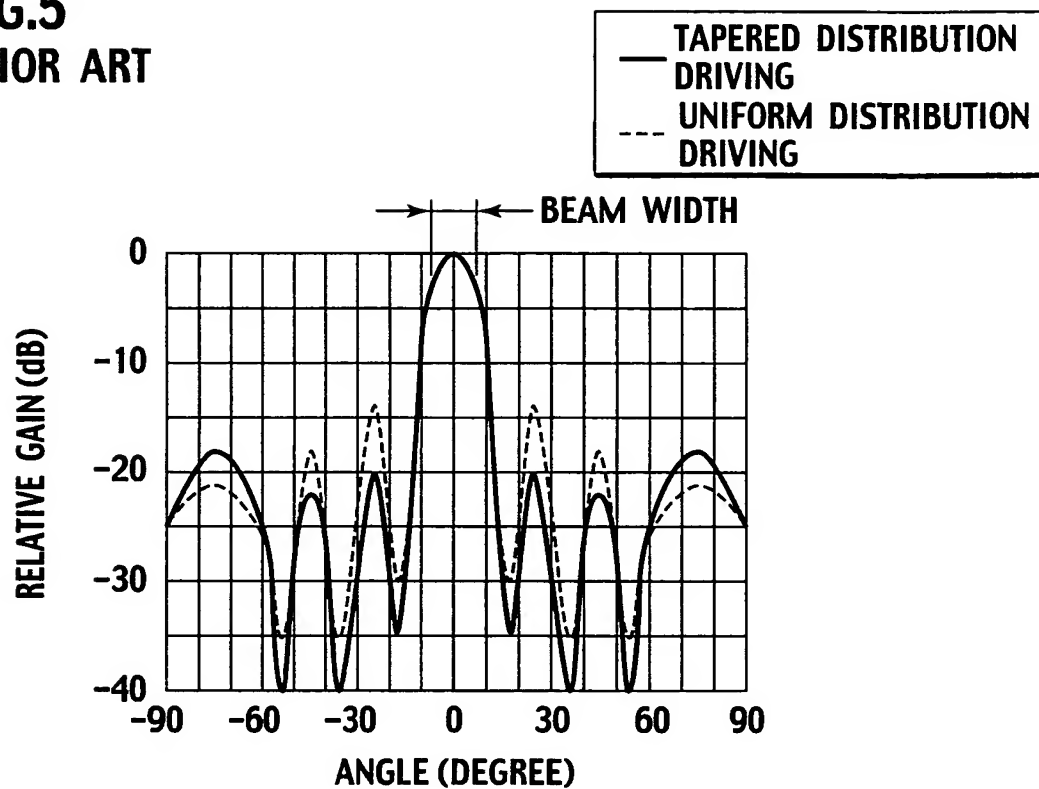


FIG.6
PRIOR ART

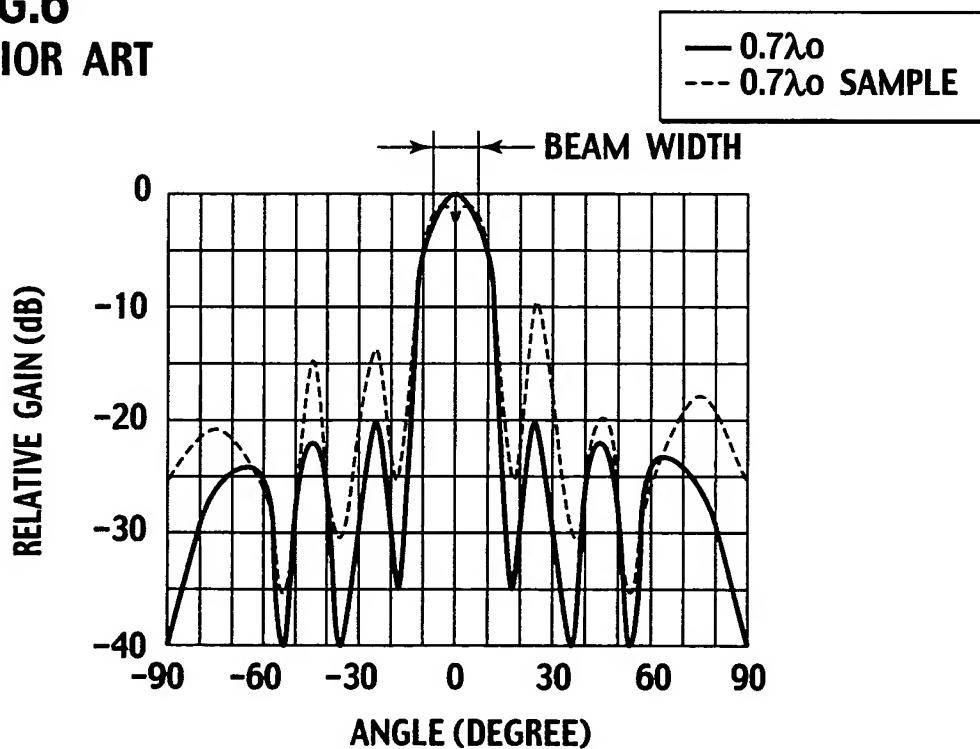


FIG.7A

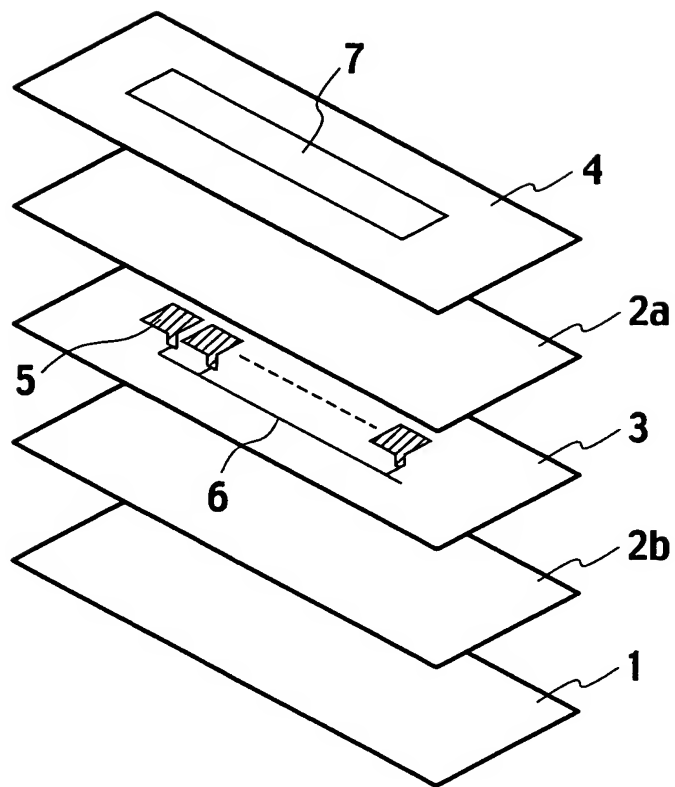


FIG.7B

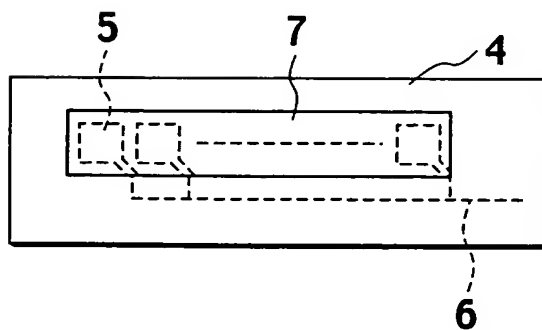


FIG.8

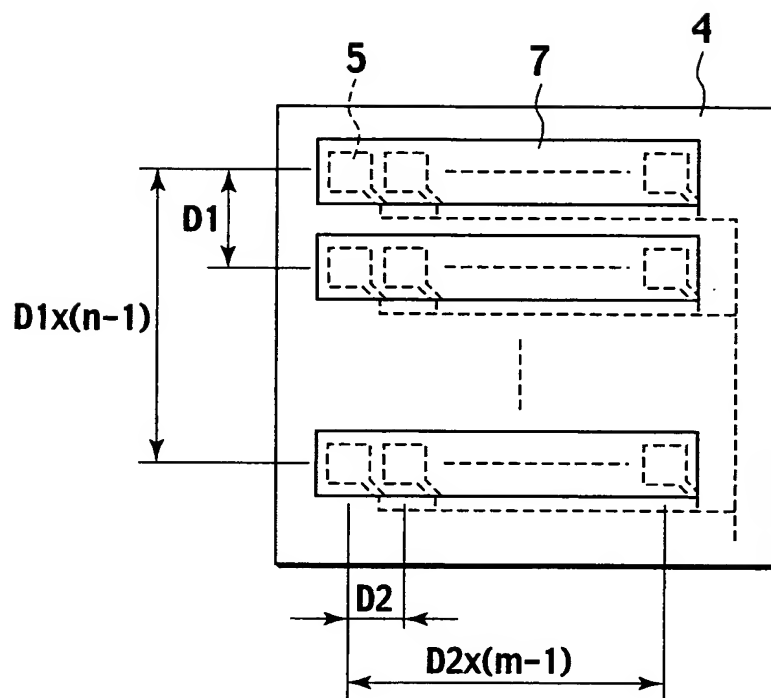


FIG.10

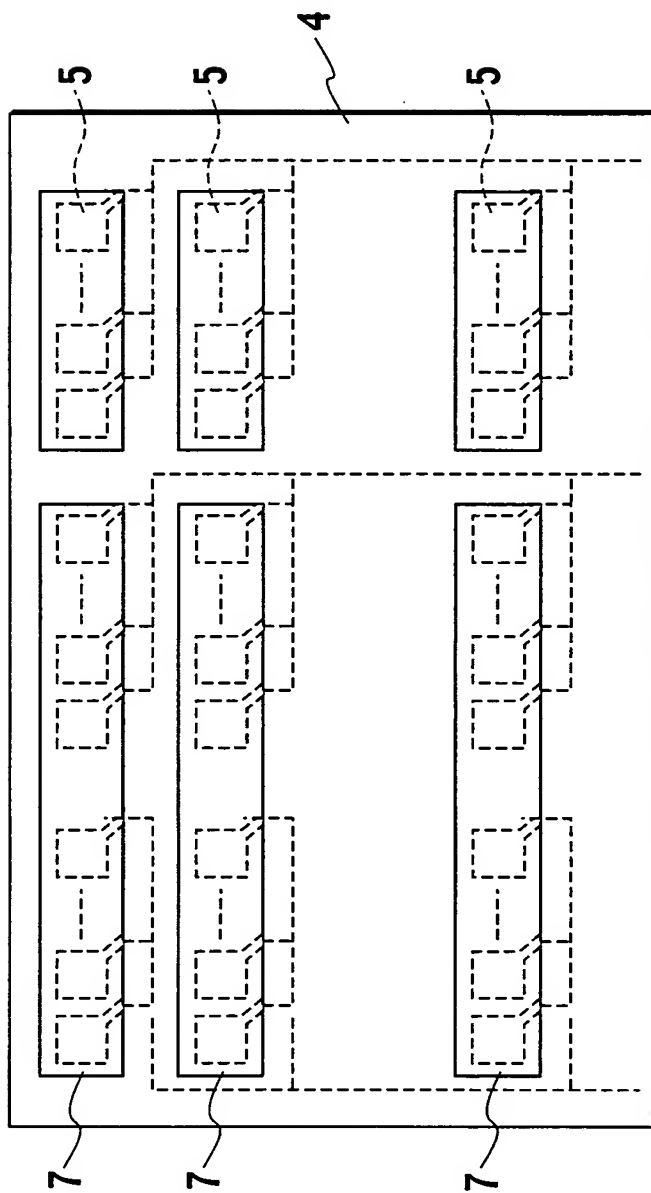


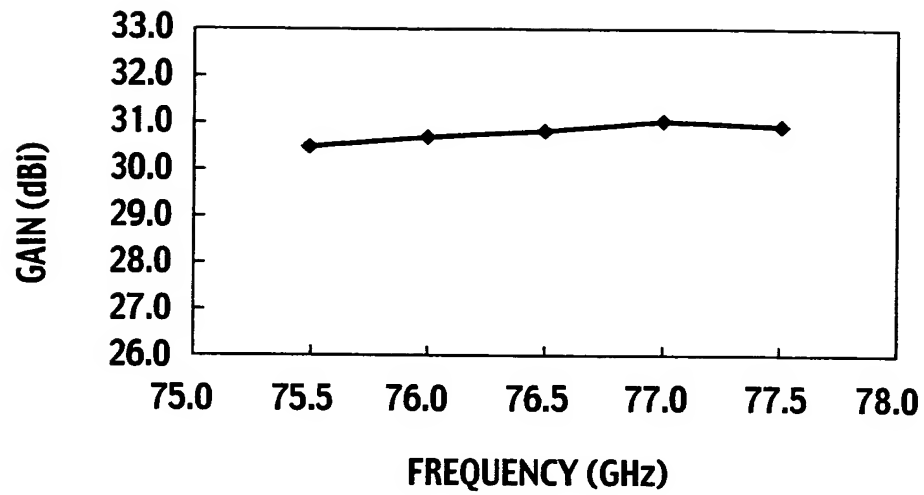
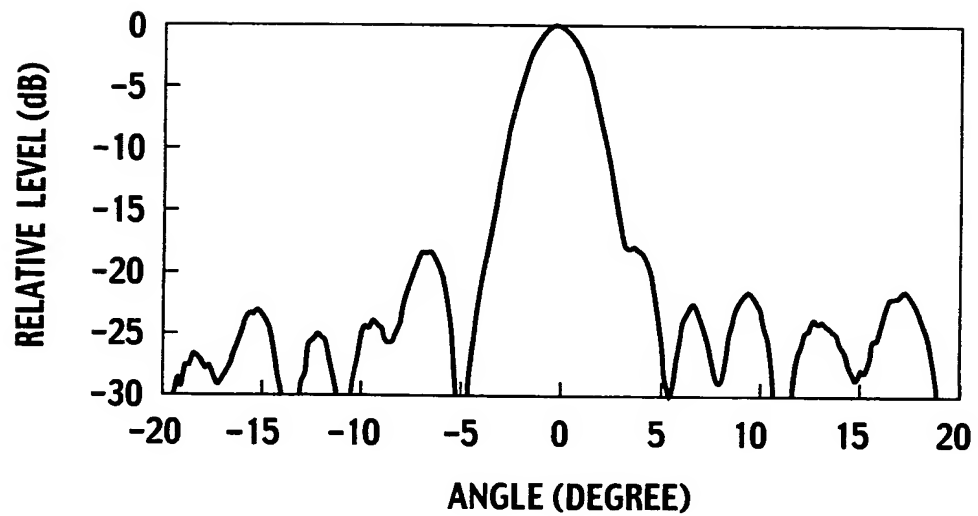
FIG.11**FIG.12**

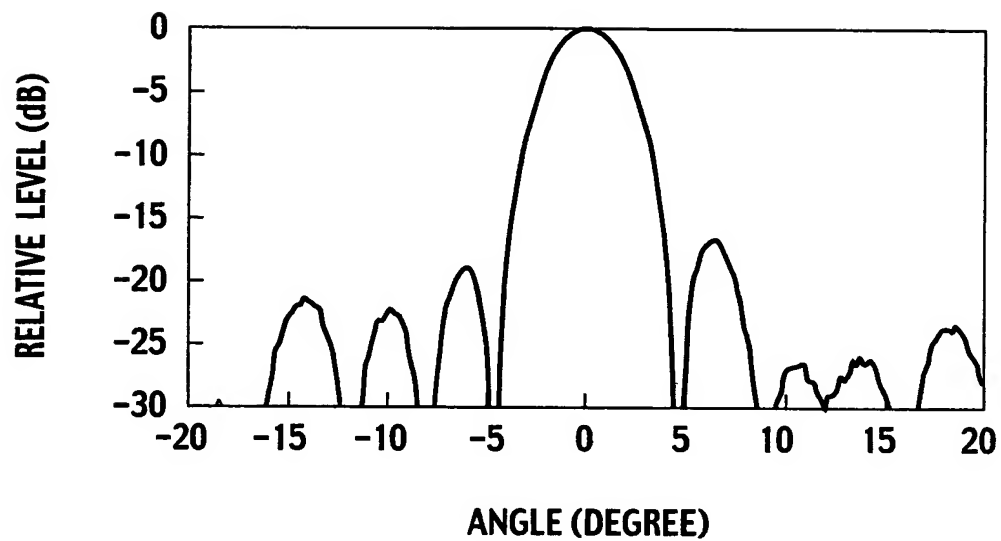
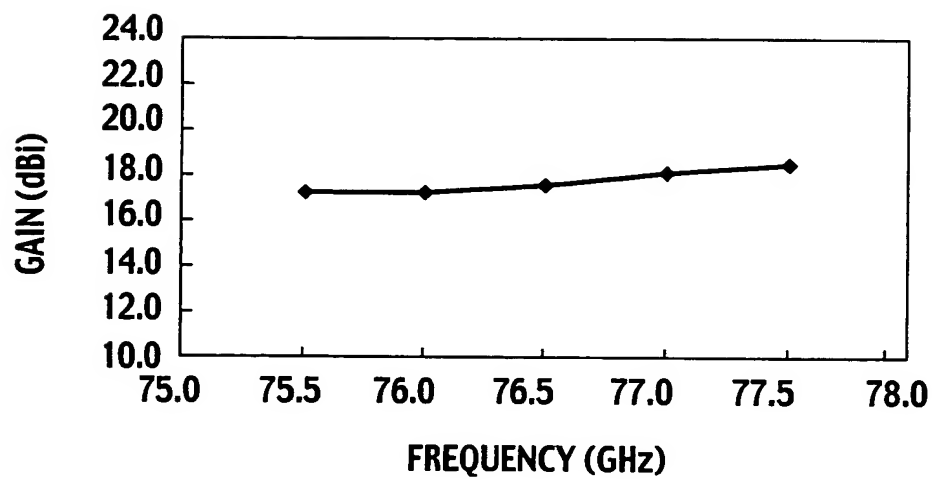
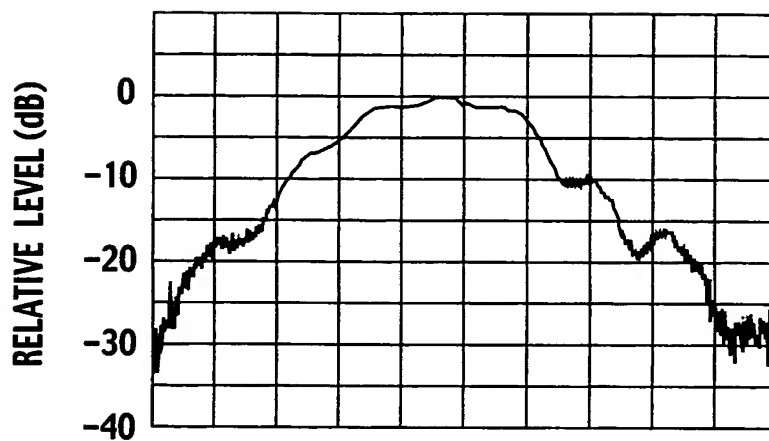
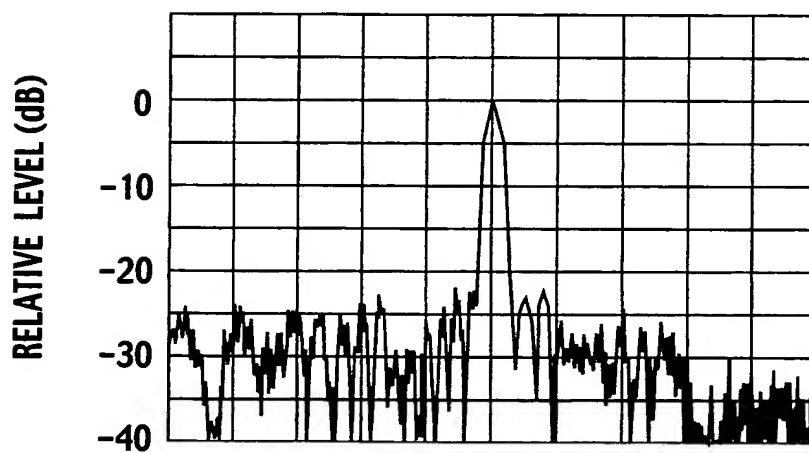
FIG.13**FIG.14**

FIG.15



**CENTER 0 DEGREE
RANGE 180 DEGREES**

FIG.16



**CENTER 0 DEGREE
RANGE 180 DEGREES**

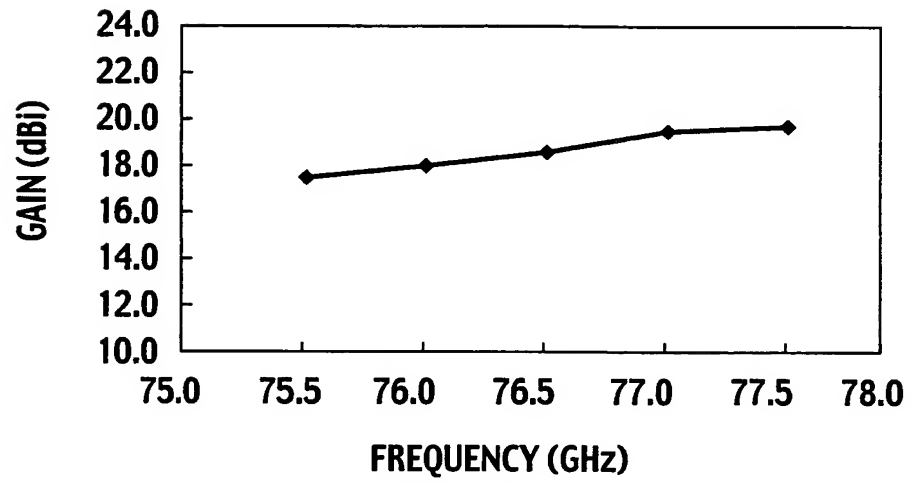
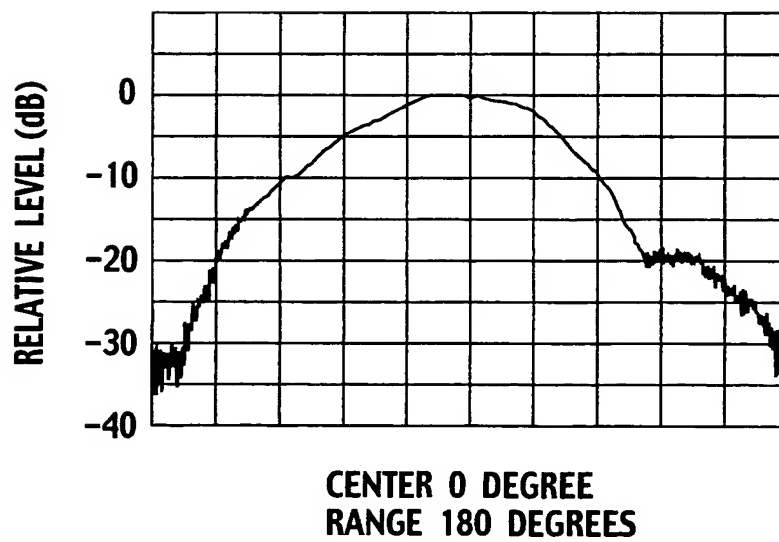
FIG.17**FIG.18**

FIG.19

